

RETURN PACKAGING INSTRUCTIONS

These instructions are to be followed when preparing to return an Associated Research Instrument. Be sure to **DISCONNECT ALL ACCESSORIES** and **INTERLOCK CONNECTOR** from the instrument before packaging to prevent damage.

Please **follow the instructions below** to properly package your instrument. **Improper packaging can result in shipping damage. Associated Research is not responsible for any damages that occur in transit.** It is recommended that you **insure your shipment** through the shipping company, in the event shipping damage does occur.



Watch the
Ship It Safe Video
*Sending in your instrument
is easy with Ship It Safe!*



1. Call **Customer Support** to obtain an RMA number.



1-847-367-4077

2. Open the instrument box and remove the foam inserts.
(large instruments have 4 foam inserts, one for each corner)




3. Line up divots in the foam inserts with the "feet" of the instrument. Fit the inserts over the front & rear panels.



↑ Feet ↑

4. Place the instrument and foam inserts in the box and ship to Associated Research.

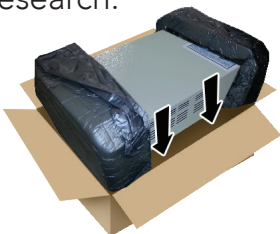

5. Mark the container **"FRAGILE"** to ensure proper handling.



6. Reference RMA number in all shipping documents.

RMA NUMBER:

0195426



13860 W. Laurel Drive, Lake Forest, IL 60045
Call 847.367.4077 Online arisafety.com